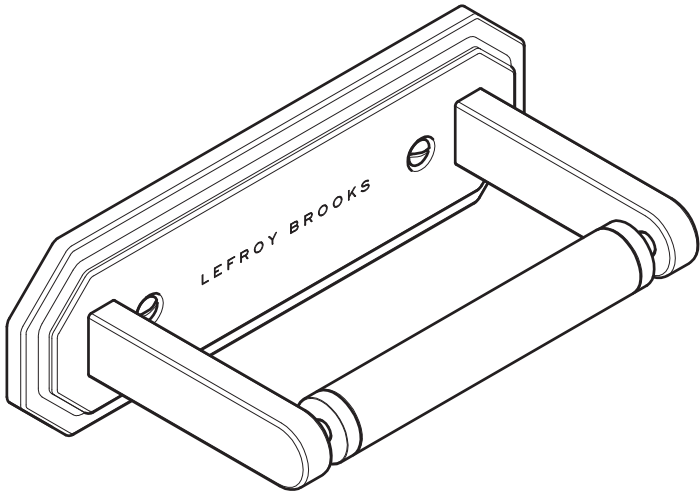# MK 4650
MACKINTOSH PAPER HOLDER
INSTALLATION GUIDE

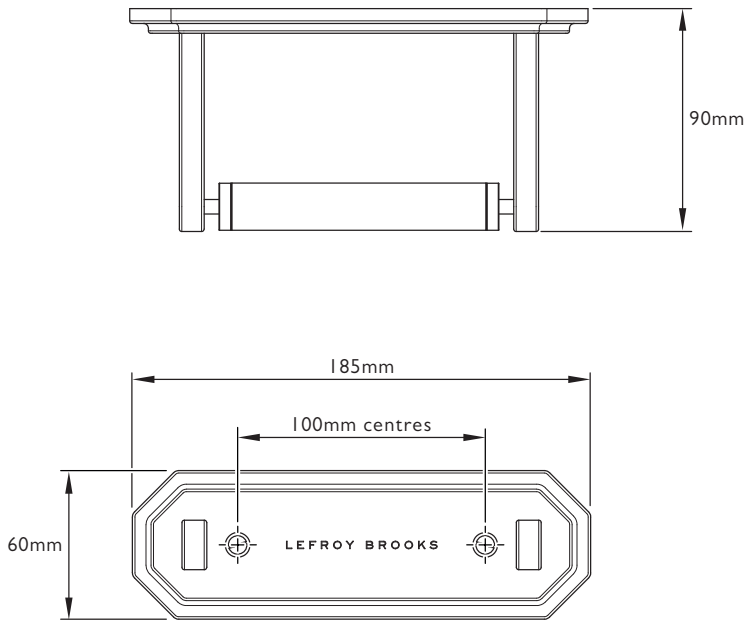LEFROY BROOKS

IMPORTANT INFORMATION

Professional installation

We recommend that our products are fitted by a fully qualified professional. A tester should be used to ensure there are no hidden pipes or electrical cables where the product is to be mounted.
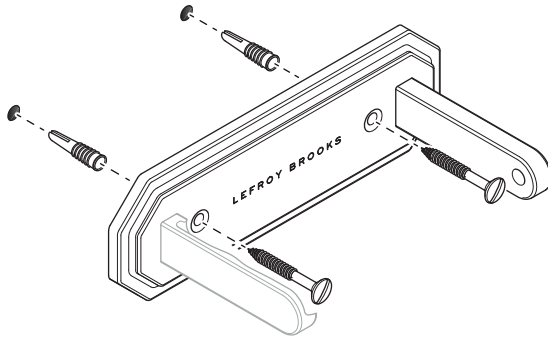
Wall fixings

The screws and wall plugs provided are suitable for most brick walls. However, if the wall is constructed of plasterboard or soft building block the appropriate fixings should be used.
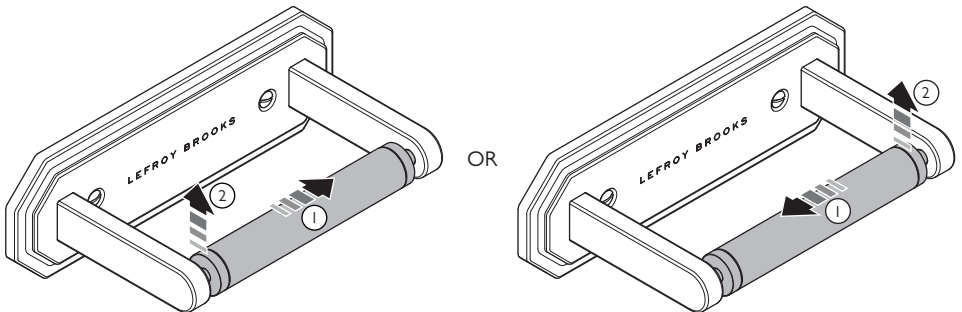
DIMENSIONS

90mm

185mm

100mm centres

60mm

LEFROY BROOKS

Shown with paper holder bar removed.

INSTALLATION

1 Remove the paper holder bar.
2 Place the paper holder on to the mounting surface.
3 Mark the hole positions on the mounting surface. Use a spirit level to ensure the holes are level.

4 Drill two holes using a suitably sized drill bit for the wall plugs supplied. If alternate fixings are to be used then drill holes to suit these fixings.
5 Insert the wall plugs into the holes then secure the paper holder using screws.

REMOVAL OF THE PAPER HOLDER BAR

OR

1 The paper holder bar is spring loaded at one end. Gently move the paper holder bar to one side.

2 Lift the opposite end clear of the support arms
3 Fit in reverse. Fit spring loaded end first.

CONTRACT ENQUIRIES

+44 (0)1992 708 316

info@lefroybrooks.co.uk

CUSTOMER SERVICE, SPARES & TECHNICAL ENQUIRIES

+44 (0)1902 390 894

technical@lefroybrooks.co.uk

L E F R O Y B R O O K S . C O . U K