
MK 4654 MACKINTOSH CERAMIC MUG HOLDER INSTALLATION GUIDE

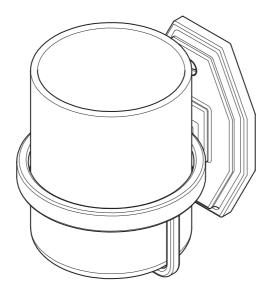


LEFROY BROOKS

DIMENSIONS



SHOWN WITHOUT MUG

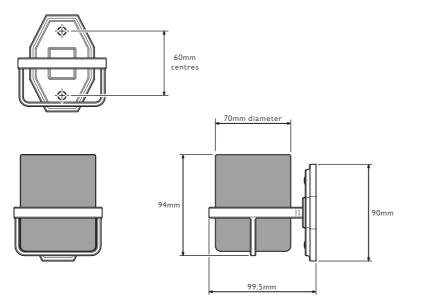

TOOLS REQUIRED










Flat blade screwdriver

Spirit level

INSTALLATION

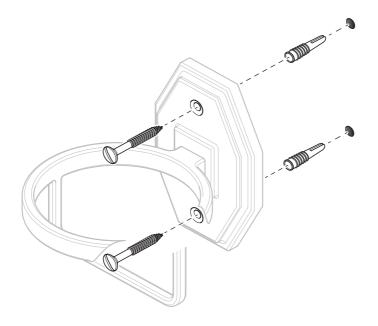

- I Remove the mug from the holder.
- 2 Mark the hole positions on the mounting surface. Use a spirit level to ensure the holes are vertically aligned.
- 3 Drill holes using a Ø6mm drill bit.

- 4 Insert the wall plugs into the holes then secure the mug holder using the screws supplied.
- 5 Place the mug into the holder.

20.065.200A / JANUARY 2016



customer support +44 (0)1992 708 316

LEFROYBROOKS.CO.UK

Whilst every effort is made to ensure the accuracy of these, they are subject to change without notice as part of the company's product development process. The use of trademarks, product design and artwork is subject to licence or agreement with LBIP Ltd. The design registrations, trademark registrations and copyrights are protected by law and the use or reproduction outside the terms of an agreement is prohibited. The right to modify designs and dimensions is reserved. LBIP Ltd is a member of ACID (Anti Copying in Design).