


**COALBROOK**



**2 HOLE DECK MOUNTED BASIN MIXER  
INSTALLATION**

## SPOUT INSTALLATION DIAGRAM

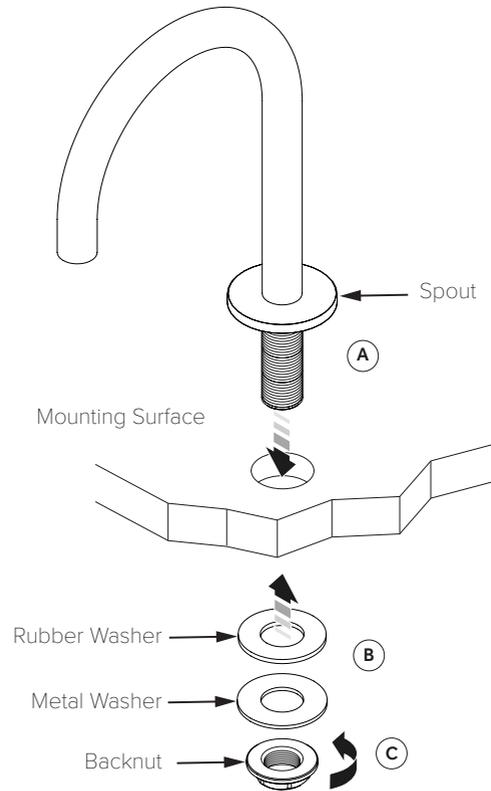


1. When necessary, drill a suitable size hole in the mounting surface to suit the threaded tail of the spout (A) which is  $\text{Ø}21$ .
2. Pass the threaded tail of the spout (A) through the hole in the mounting surface. Align the spout.
3. Locate both washers (B) onto the threaded tail. Ensure that the rubber washer is assembled first so that it comes into direct contact with the mounting surface.
4. Screw the backnut (C) onto the threaded tail and tighten to secure the spout. Do not over tighten.

**COALBROOK**

www.coalbrookuk.co.uk | info@coalbrookuk.co.uk

## FLOW VALVE INSTALLATION DIAGRAM

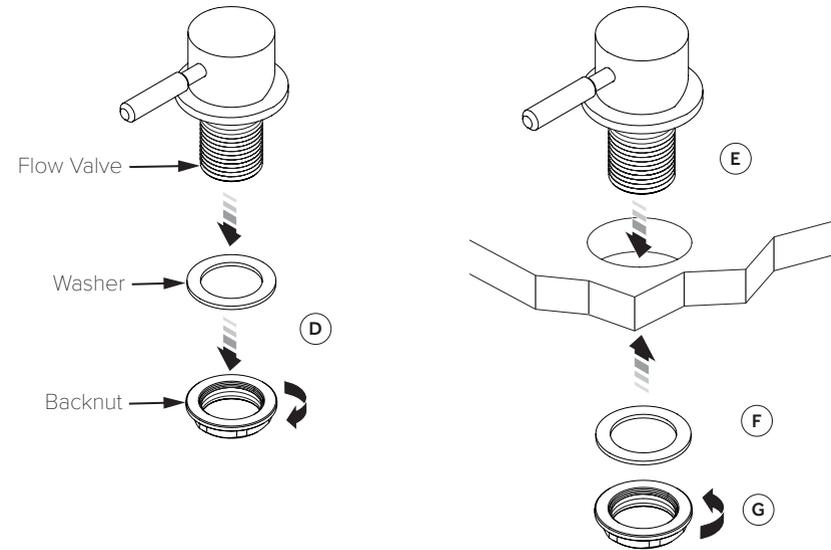


1. Unscrew and remove the backnut and washer from the flow valve assembly (D).
2. When necessary, drill a suitable size hole in the mounting surface to suit the threaded tail of the flow valve (E) which is  $\text{Ø}30$ .
3. Pass the threaded tail of the flow valve (E) through the hole in the mounting surface. Align the lever.
4. Locate washer (F) onto the threaded tail.
5. Screw the backnut (G) onto the threaded tail and tighten to secure the flow valve. Do not over tighten.

**COALBROOK**


www.coalbrookuk.co.uk | info@coalbrookuk.co.uk

### MAKING THE CONNECTIONS DIAGRAM (STEPS 1 - 3)

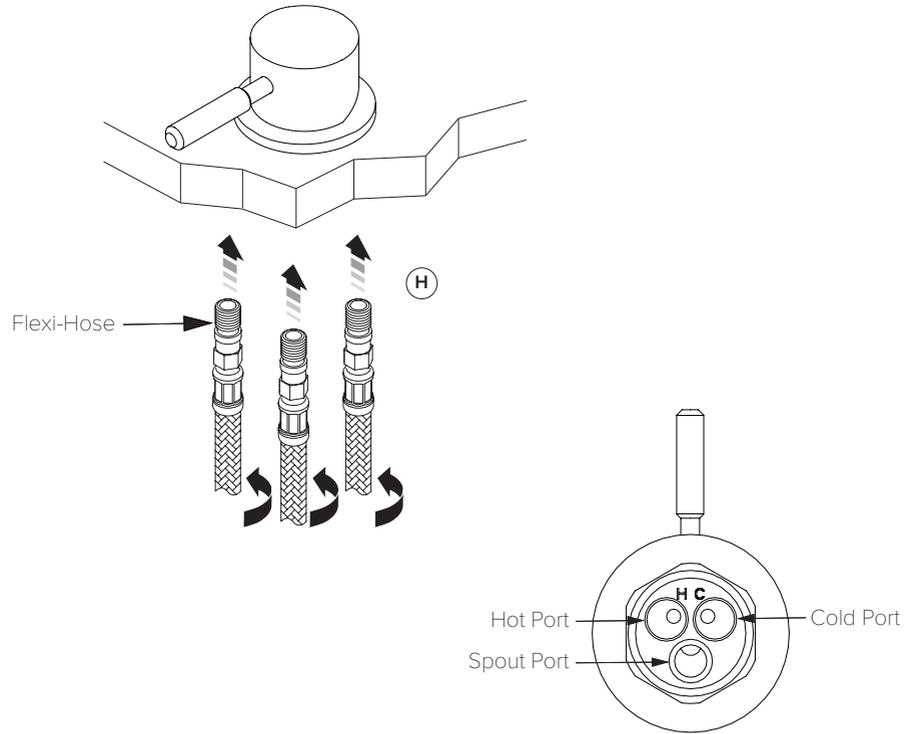

1. Screw the three flexi-hoses into the underside of the flow valve body (H).
2. Connect hoses to the appropriate water supplies at the bottom inlets of the flow valve. The hot connection must be made on the left hand side port, and the cold connection on the right hand side port.
3. The spout connection will be made to the rear port of the valve.

### MAKING THE CONNECTIONS DIAGRAM (STEP 4)

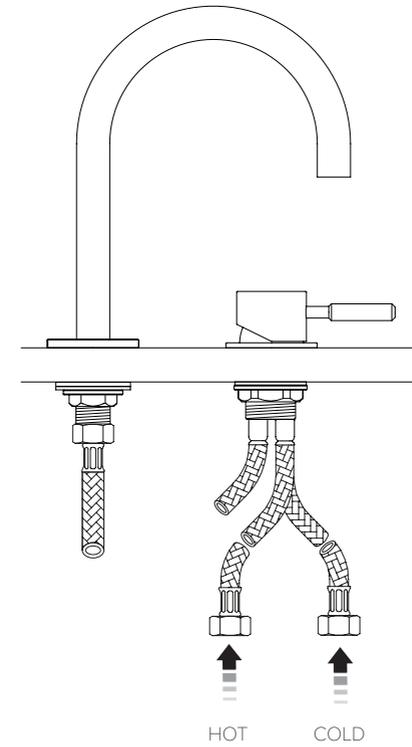

4. Check all connections for leaks before concealing pipework and finishing installation.



**COALBROOK**

[www.coalbrookuk.co.uk](http://www.coalbrookuk.co.uk) | [info@coalbrookuk.co.uk](mailto:info@coalbrookuk.co.uk)


**COALBROOK**

[www.coalbrookuk.co.uk](http://www.coalbrookuk.co.uk) | [info@coalbrookuk.co.uk](mailto:info@coalbrookuk.co.uk)

**SPECIFICATION DIAGRAM (DC1003 & DO1003) (mm)**

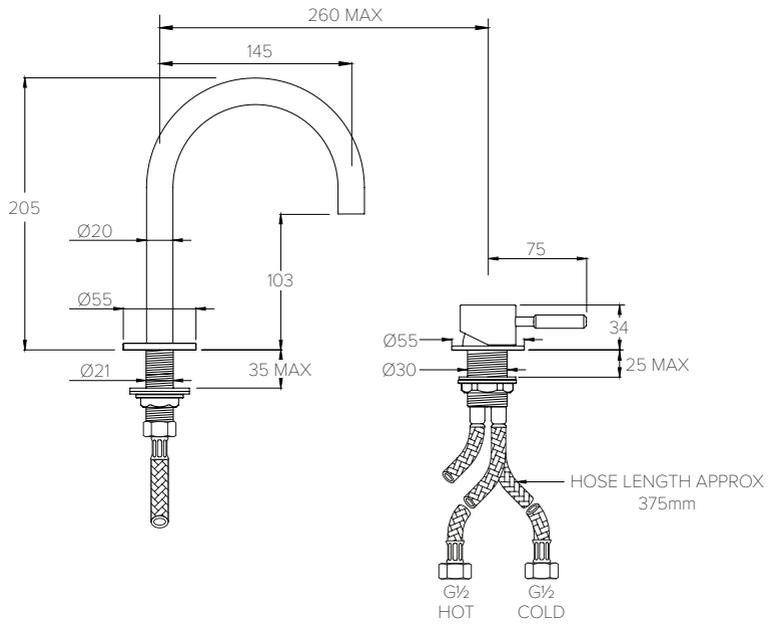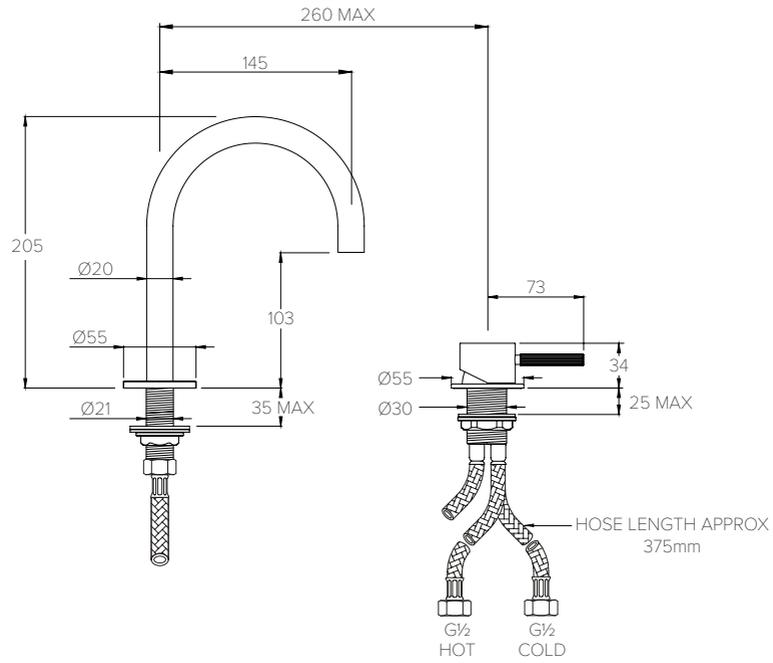


**SPECIFICATION DIAGRAM (ZU1003) (mm)**

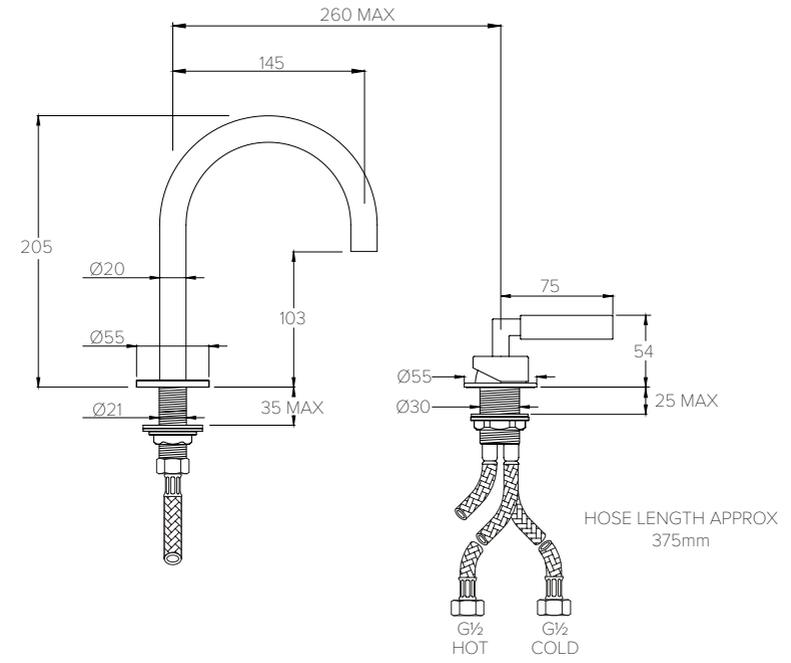

**TYPICAL FLOW RATES (DC1003, DO1003 & ZU1003)**

Flow rates shown are free-flowing and may vary subject to restrictions created by installation, pipework layout or application

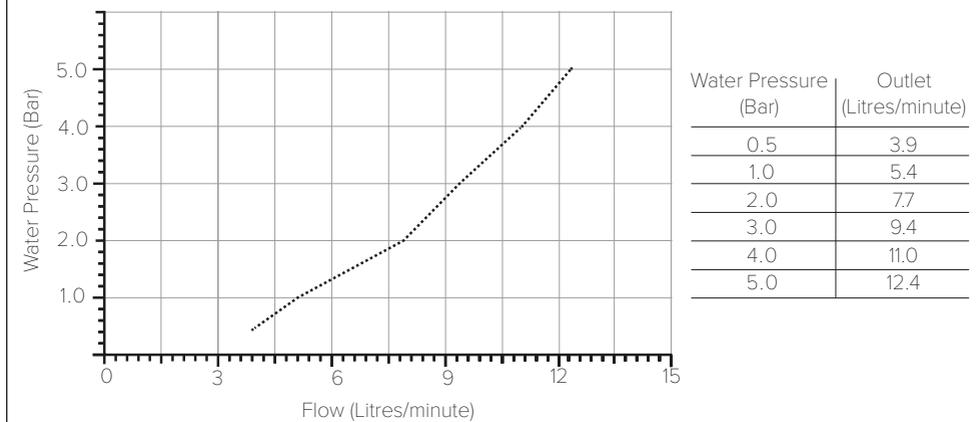


**COALBROOK**

www.coalbrookuk.co.uk | info@coalbrookuk.co.uk

**COALBROOK**


www.coalbrookuk.co.uk | info@coalbrookuk.co.uk

SPECIFICATION (DC1004) (mm)

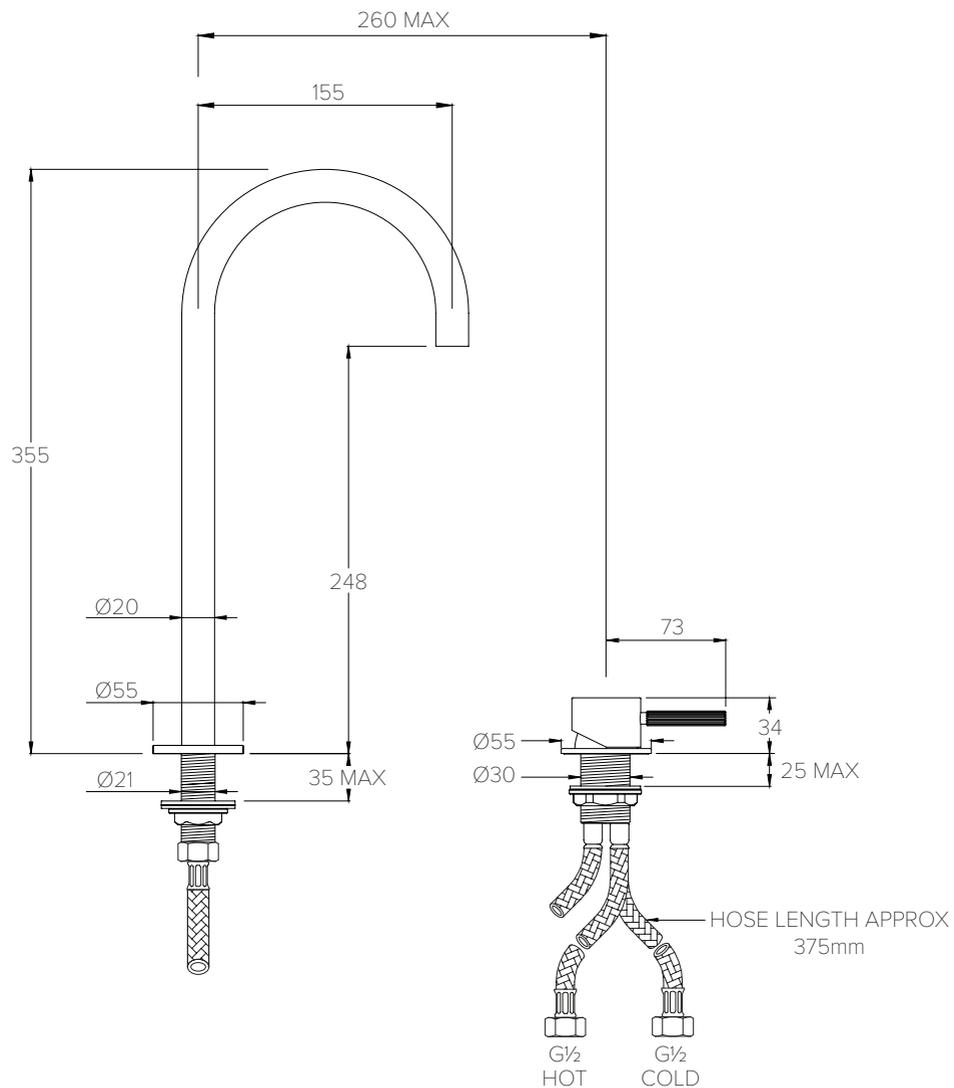


COALBROOK

SPECIFICATION (DO1004) (mm)

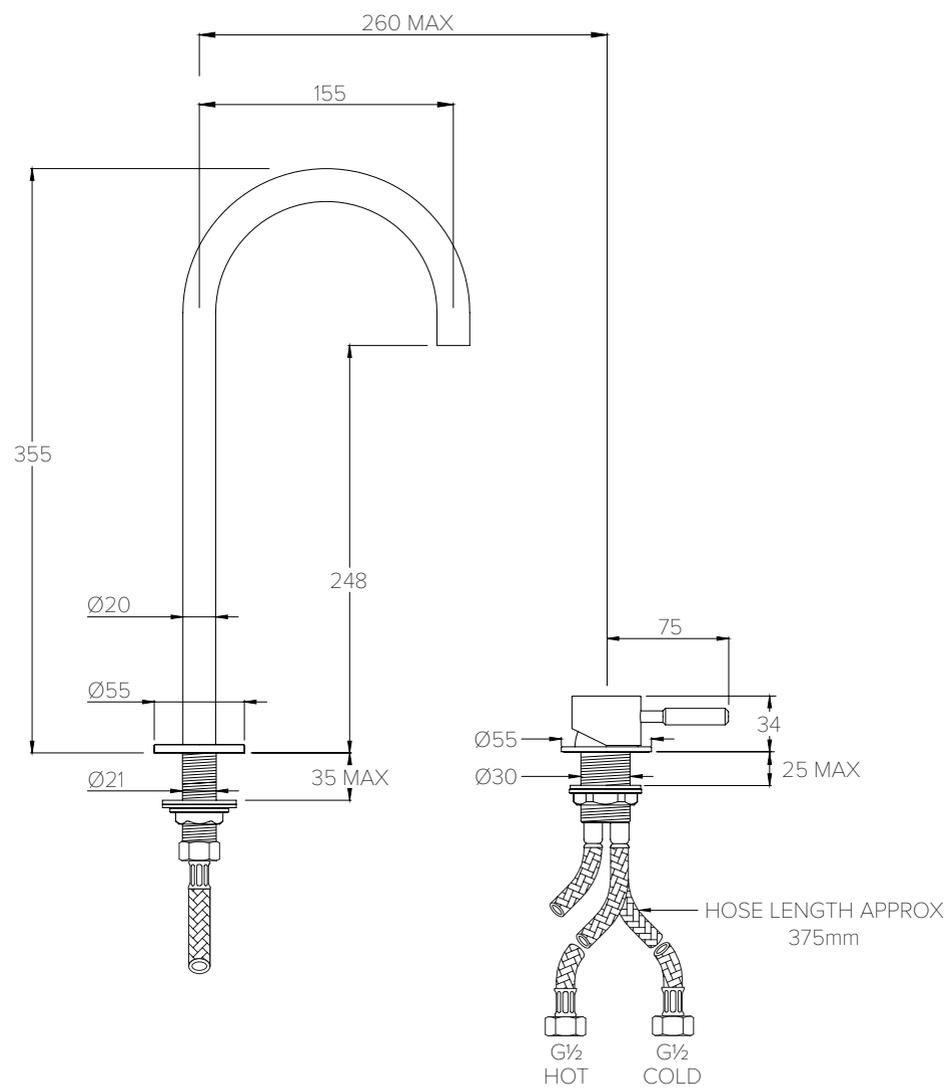

COALBROOK

**SPECIFICATION DIAGRAM (ZU1004) (mm)**

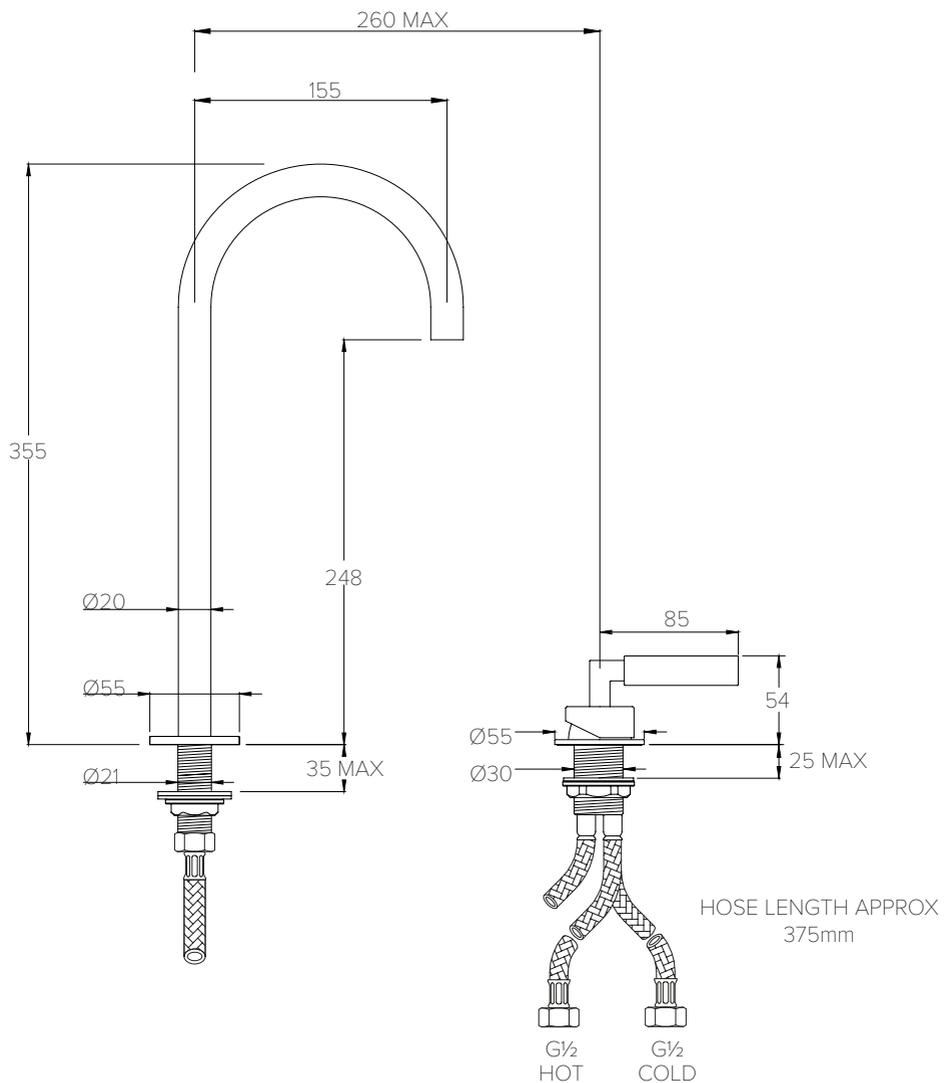


**COALBROOK**

www.coalbrookuk.co.uk | info@coalbrookuk.co.uk

**TYPICAL FLOW RATES (DC1004, DO1004 & ZU1004)**

Flow rates shown are free-flowing and may vary subject to restrictions created by installation, pipework layout or application

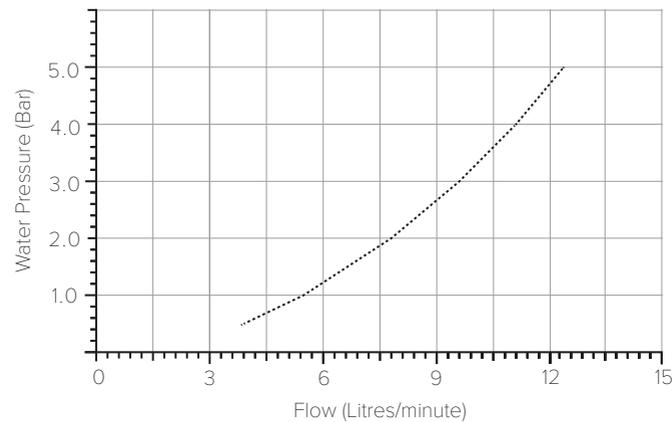

Water Pressure (Bar)	Outlet (Litres/minute)
0.5	3.8
1.0	5.5
2.0	7.8
3.0	9.6
4.0	11.1
5.0	12.4

**COALBROOK**

www.coalbrookuk.co.uk | info@coalbrookuk.co.uk



**COALBROOK**

Whilst every effort is made to ensure the accuracy of these, they are subject to change without notice as part of the company's product development process. The use of trademarks, product design and artwork is subject to licence or agreement. The design registrations, trademark registrations and copyrights are protected by law and the use or reproduction outside the terms of an agreement is prohibited.

The right to modify designs and dimensions is reserved. E & O.E.

v1.0721

**COALBROOK**

[www.coalbrookuk.co.uk](http://www.coalbrookuk.co.uk) | [info@coalbrookuk.co.uk](mailto:info@coalbrookuk.co.uk)